

# SmokelessLog.com

## SAFETY INSTRUCTIONS

SmokelessLog Alcohol Gel Fuel Cartridges provide a safe way to enjoy a fire in your Hearth Cabinet.

The Cartridges are single-use and should NEVER be refilled, NOR SHOULD YOU EVER, under any circumstances, modify or alter any part of the CARTRIDGE OR YOUR HEARTH CABINET SYSTEM. Modifying or altering the product may make the system unsafe and cause a fire.

## TO LIGHT A SINGLE CARTRIDGE:

- 1) Place the unopened fuel cartridge in the cartridge holder or ceramic log set, rubber cap end up, so that the cartridge is sitting flat and level.
- 2) Once the cartridge has been placed into the cartridge holder or log set, carefully remove the rubber cap from the cartridge to expose the alcohol gel fuel.
- 3) Make sure that no gel spills, splatters, or ends up outside the cartridge. If it does, wipe the surface(s) clean with a damp towel and let dry completely before attempting to light the cartridge.
- 4) With a long butane or BBQ lighter, light the gel fuel by bringing the flame close to the gel. Do not stick the lighter into the gel. If lit gel gets on the lighter, keep the lighter still and away from any flammable objects or materials and wait until the lit gel extinguishes itself.

### TO LIGHT TWO CARTRIDGES:

- 1) Place both unopened fuel cartridges in the cartridge holder or ceramic log set.
- 2) Follow steps 2 through 4 above.

IMPORTANT: DO NOT put in one cartridge, light it, and then put in another. Put both in, and then light both.

NOTE: If you have a double log or cartridge holder, NEVER take out or put in a cartridge while either cartridge is burning. This is very dangerous. Repeat: Do not do this!

### TO EXTINGUISH CARTRIDGES:

The flame will go out on its own when the fuel is used up. To manually extinguish the cartridge, carefully sit the metal snuffer plate(s), one for each cartridge, that came with your Hearth Cabinet fireplace, on the top of the cartridge until the flame has gone out.

CAUTION: Fuel cartridges are hot for up to 30 minutes after being extinguished, do not attempt to touch them. Wait 15 minutes before removing or replacing cartridges.

NEVER LEAVE A FIRE UNATTENDED and never wear long or loose sleeves when lighting or extinguishing a cartridge.

NOTE: Whenever you have a fire in a room, whether from a fireplace or a candle, make sure the room is well-ventilated and equipped with a smoke and carbon monoxide detector.

SmokelessLog Alcohol Gel Fuel Cartridges produce real fire and therefore the product instructions must be followed completely and faithfully.

**Please keep this instruction sheet**. This instruction sheet must be reviewed and understood by anyone using SmokelessLog Alcohol Gel Fuel Cartridges. The purchaser of this product is responsible for making sure that SmokelessLog Alcohol Gel Fuel Cartridges are not used by anyone unable to use them properly.

O1112021